


## Tub Skirt Installation instructions

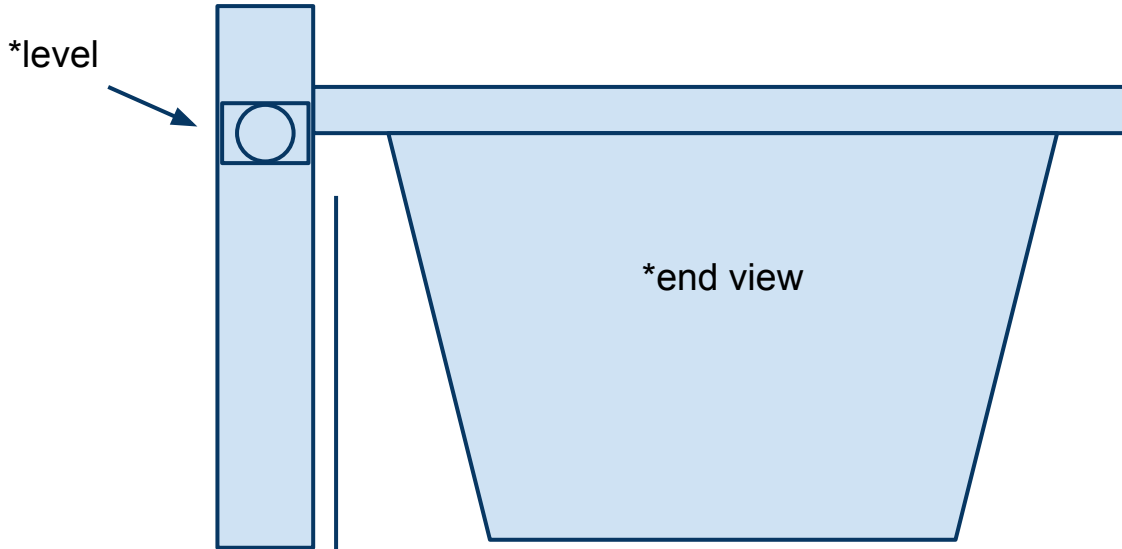

Step 1: Use a level to mark a line on the floor that is plumb with the flanged face of the tub.

Step 2: Attach a 1" x 2" to the floor across your plumb line. (This is to have something to adhere the bottom of the skirt to.)

Step 3: Using your level, fir out off of the factory installed vertical runner legs to your plumb line. (This is to have something to adhere the middle of the skirt to.)

Step 4: Put the skirt in place, measure and scribe to fit to find your desired look. (Skirt looks best if finished top is 1/4" to 1/2" below tub deck.)  
Make sure skirt will fit, then remove.

Step 5: Apply small pieces of double faced tape and small dabs of 100% silicone everywhere that the back of the skirt will make contact.  
Attach skirt.

Step 6: Run a small bead of white 100% silicone where the skirt meets the tub. Clear or transwhite silicone are preferred where skirt meets tile.